





## Instruction Manual 21006 - 52ROXFO6

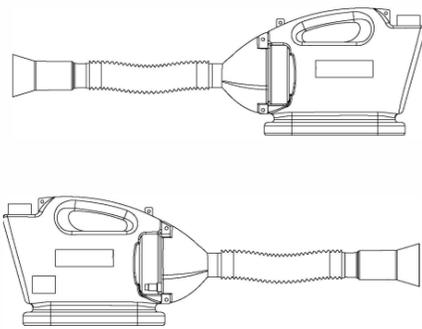

Please read this instruction manual carefully before using the fogger.

### I . Product Spare Parts Description

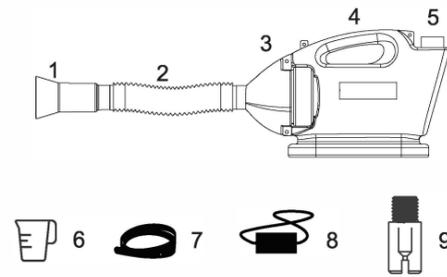


- |                  |               |                 |
|------------------|---------------|-----------------|
| 1.Atomizer       | 2.Air pipe    | 3.Switch        |
| 4.Tank           | 5.Tank Cap    | 6.Measuring cup |
| 7.Shoulder strap | 8.Power cable | 9.Nozzle        |

### II . Product specifications and technical parameters

Specification	Parameter
Rated voltage	AC 220-240V / AC100-130V
Capacity	5L
Rated power	800W
Spray volume	80-380ml/min(adjustable)
Droplet size	35-80µm
Windless environment	>8M
Product size	866*268*136mm

### III. Operation instructions:

1. Add the disinfectant liquid in the tank and tighten the tank cap. (Noted: Do not add more liquid than the maximum capacity of the tank, as it could cause damage to the fogger).
2. Turn on the power switch of the device, the machine will begin to work (as shown below).

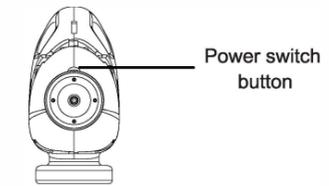

3. After use, drain tank and put some water in the tank and operate the fogger for 1-2 minutes to avoid the disinfectant liquid blocking or corroding the nozzles and pipes.

### IV. Troubleshooting

Reason	Solution
1. Fault: the motor does not run. a.Overload operation, machine suddenly stop working . b.The power line leakage switch is activated	A.Waiting for few minutes, device, then device normal. B.Press the leakage switch button again
2. Fault: the motor runs but does not spray. The nozzle is blocked.	Remove the nozzle to clean.

### VI. Caution

1. Do not immerse in water. If unit gets wet, wait for it to dry completely before turning it on.
2. Operating ambient temperature is between 0 - 40 C
3. Do not bump or drop the unit as it will cause interior and exterior damage.
4. Running the fogger for extended periods of time may cause overheating and the fogger to shut down. Should this happen let the fogger cool.
5. Please turn off the power immediately if the following situations occur:
  - Water leaks into the internal chamber of the device
  - The pump suddenly stops
  - The pump sound changes noticeably
  - The tank is leaking water
  - The pump does not work on startup abnormal conditions during start up.
- 5.Do not fill beyond the indicated line.
6. Do not use the device in the rain.
7. Do not use wet hands to "plug" and "unplug" the fogger.
8. Do not operate near flammable or explosive materials.

### VII. Warranty and after-sales service

(1 ). All devices enjoy 3 months warranty against manufacturer defects. Warranty is voided if the unit has been abused.

### VII. Accessories and spare parts

Product	Specification	Quantity	Remark
Device	Host	1PC	
Strap	1.5M	1PC	
Filter sponge		2PC	
Nozzle	Nozzle Size 0.3mm 0.5mm 1.0mm	1PC	Droplet size 0.3mm <35µm 0.5mm <40µm 1.0mm <80µm
Measuring cup	100ml	1PC	
Hardware accessory	Zinc alloy+SUS304	1PC	
User manual		1PC	